Panoview

Panoview Portable Pull-Up Screen

User Manual

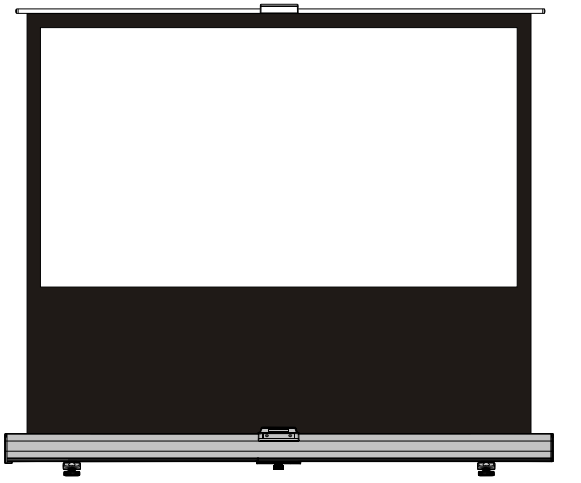

Panoview

Optoma Asia Corporation
5F., No 108, Minchiuan Rd., Xindian City, Taipei 231
Tel: 886-2-2218-2360
Fax: 886-2-2218-2313
www.optoma.com.tw

Optoma USA
715 Sycamore Drive
Milpitas, CA 95035 USA
Tel: 408-383-3700
Fax: 408-383-3702
www.optomausa.com

Optoma Europe Ltd.
42 Caxton Way
The Watford Business Park
Watford Hertfordshire WD18 8QZ UK
Tel: +44 (0) 1923 691 800
Fax: +44 (0) 1923 691 888
www.optoma.co.uk

ISO9001:2000
International Certification

The compact and lightweight design of the portable pull up screen is designed for use in many different environments.

Description

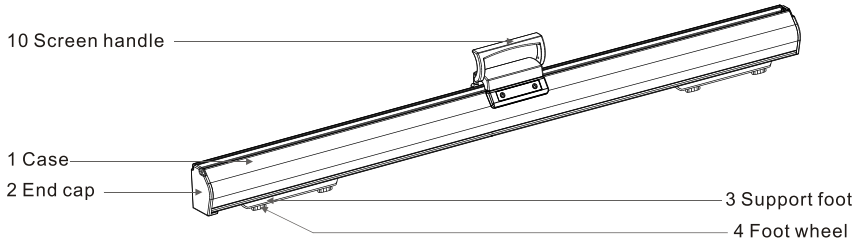

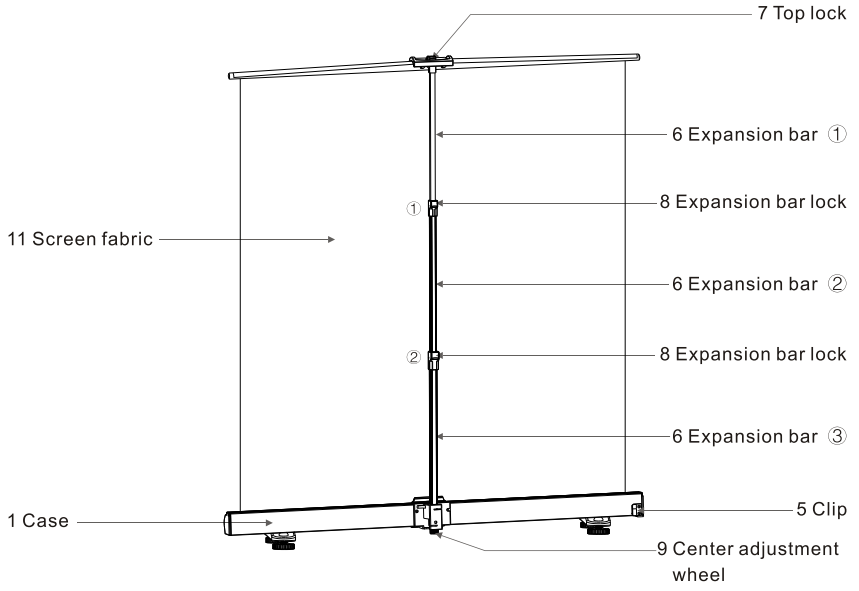

Case Assembly

1. Case
2 .End cap
3 .Support foot
4 .Foot wheel
5 .Clip

Expansion Bar Assembly

6. Expansion bar ① ② ③
7. Top lock
8. Expansion bar lock
9. Center adjustment wheel

Others

10. Screen handle
11. Screen fabric

Warnings

1. Before pushing the support bar lock button, be sure to hold the support bar if the screen is attached to it. Not doing so can cause the screen to drop down fast which can cause personal injury and/or damage to the screen.
2. Do not fold the screen.
3. Do not lift the screen from sides. Always use the handle to lift the screen.
4. Ensure that the screen and the support bar are fully locked back in case before carrying it.

Installation

Open Screen

1.Position screen as desired. Stabilize the screen by rotating support feet (Figure 1).

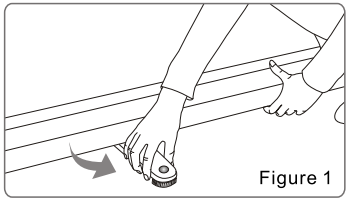

Figure 1

2. Unlock the screen case.
3. Lift the expansion bar to vertical position. The bar will click at perpendicular position to fully lock in place (Figure 2, 3 & 4).

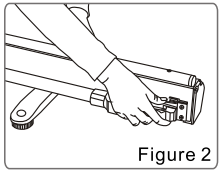

Figure 2

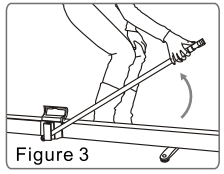

Figure 3

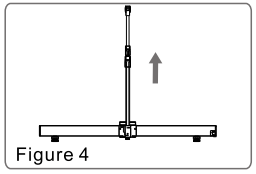

Figure 4

4. Carefully lift the screen using screen handle (Figure 5).

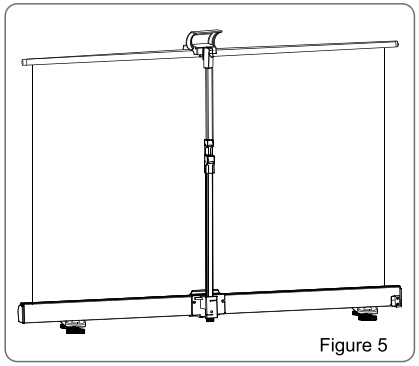

Figure 5

5. Fasten the screen handle at the top of the expansion bar and lock in place (Figure 6 & 7).

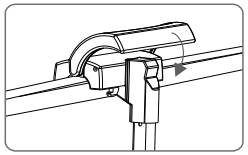

Figure 6

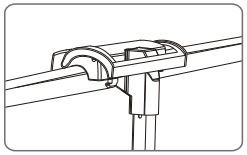

Figure 7

6.Press button on expansion bar lock to release expansion bar. Then adjust the screen to the desired height. There are six different height levels for adjusting the screen height (Figure 8 and 9).

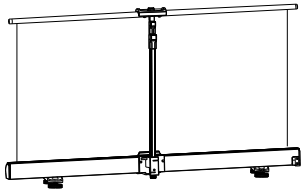

Figure 8

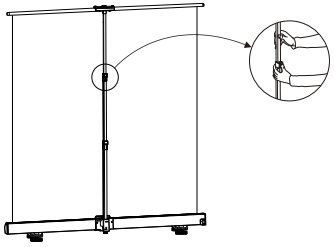

Figure 9

7. Use the foot wheel to adjust the screen position so that it matches with the projected image (Figure 10).

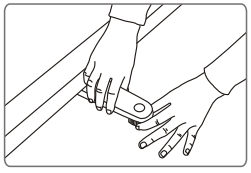

Figure 10

7. If the screen is not smooth, use the center adjustment wheel to adjust the screen (Figure 11).

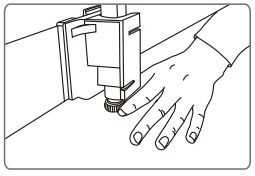

Figure 11

Retract screen

1. Hold the upper expansion bar and push the expansion bar lock button to retract the expansion bar (Figure 12 and 13).

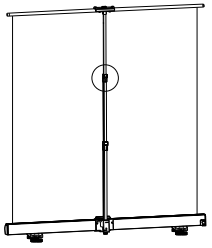

Figure 12

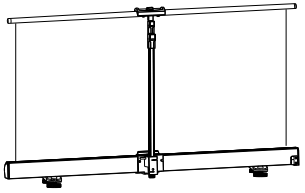

Figure 13

2. Unlock the screen handle from the support bar. Lift the handle and slowly lower the screen for it to retract in the case. Lock the handle on the base lock (Figure 14).

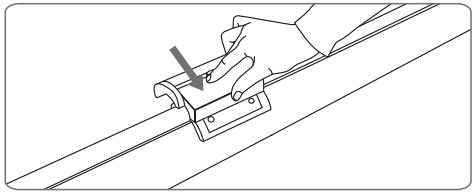

Figure 14

3. Fold down the support bar (Figure 15) and attach it back to its clip. Return the support feet back to its original position.

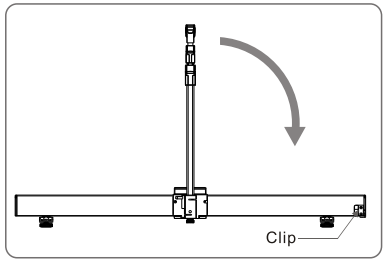

Figure 15